

PRODUCT FICHE

1. Supplier's name or trademark.

Victoria-05 Ltd.

1B Ivan Momchilov Str.
5100 Gorna Oryahovitsa
Republic of Bulgaria
Phone: +359 618 60200
E-mail: info@v05.bg
<http://www.v05.bg>

2. Supplier's model identifier.

Pellet boiler **CLASSIC 20**

3. Energy efficiency class.

A++

4. Rated heat output.

21 kW

5. Energy efficiency index.

125

6. Seasonal space heating energy efficiency.

85 %

7. Specific precautions during assembling, installing or maintaining:

- Pellet boiler must not run without water in the system and the pressure must not fall below 1 bar. Should the system be alighted without water, pellet boiler can be damaged.
- Pellet boiler is designed to heat water through automated burn in the combustion chamber of wood pellets with a diameter of \varnothing 6 mm.
- Warranty is voided by unauthorized use of combustible material.
- The risk that could arise from non-compliance of this instructions manual is a direct contact with electric parts (internal), contact with fire or hot surfaces.
- Pellet boiler is equipped with safety components that guarantee lock it automatically in case of failure of any of its components. Safety components are activated without outside interference.
- Necessary for the proper operating of the pellet boiler is its proper installation in accordance with the following instructions.
- Fire door should not be opened during operation of the pellet boiler. The burning process is automated and does not require external intervention.
- Do not allow to burn the pellet boiler if there are cracks in the glass.
- Under no circumstances should not be allowed penetration of foreign substances in the firebox or hopper.
- Do not use combustible materials to clean soot in the chimney.
- Turn off the pellet boiler from the grid-circuit before cleaning or servicing.
- Use a vacuum cleaner to clean the combustion chamber and pellet fuel hopper only when pellet boiler is cold.
- Do not use water to clean the internal parts of the pellet boiler.
- During operation of the pellet boiler must not be allowed to touch a child to its surface as it is hot. Danger of burns!
- The handle of the pellet boiler warms as much as the front panel, so it must be operated with a heat-resistant glove.
- During operation of the pellet boiler flue pipes and fire door are hot.
- Do not place flammable objects and liquids away from the pellet boiler.
- Never use flammable liquids to burn the pellet boiler.
- Do not obstruct fresh air to enter the room where pellet boiler is installed and through the holes on the pellet boiler.
- Do not soak pellet boiler and do not touch electrical components with wet hands.
- Do not mount any adapters to flue pipes and chimney.
- To operate properly and safely, pellet boiler should be installed in a room that is fire-resistant and equipped with everything needed (electricity, air exchange, vents).
- The temperature of the room where it is installed the pellet boiler must not be lower than 0°C.
- Use appropriate non-freezing additives for water in the system.
- Make sure the temperature of the return water is not lower than 45°C.
- Rating label is placed on the back of the pellet boiler.
- Keep this instruction manual, warranty card and purchase invoice in good condition, as will be necessary in any inquiries.
- In extinction, do not burn a pellet boiler again before cleaning the combustion chamber!
- Removed pellets from the combustion chamber should not be placed back in the pellet fuel hopper!