

## PRODUCT FICHE

1. Supplier's name or trademark.	<b>Victoria-05 Ltd.</b> 1B Ivan Momchilov Str. 5100 Gorna Oryahovitsa Republic of Bulgaria Phone: +359 618 60282 Fax: +359 618 60200 E-mail: <a href="mailto:info@v05.bg">info@v05.bg</a> <a href="http://www.v05.bg">http://www.v05.bg</a>
2. Supplier's model identifier.	Pellet stove <b>VITTORIA 8</b>
3. Energy efficiency class.	<b>A+</b>
4. Direct heat output	<b>6.1 kW</b>
5. Indirect heat output.	-
6. Energy efficiency index.	<b>121</b>
7. Seasonal space heating energy efficiency.	<b>87.8 %</b>
8. Specific precautions during assembling, installing or maintaining:	
<ul style="list-style-type: none"><li>To operate properly and safely, pellet stove should be installed in a room that is fire-resistant and equipped with everything needed (electricity, air exchange, vents).</li><li>Do not obstruct fresh air to enter the room where pellet stove is installed and through the holes on the pellet stove.</li><li>The temperature of the room where it is installed the pellet stove must not be lower than 0°C.</li><li>Pellet stove is designed to generate a heat through automated burn in the combustion chamber of wood pellets class A1 with a diameter of <math>\varnothing</math> 6 mm.</li><li>Warranty is voided by unauthorized use of combustible material.</li><li>The risk that could arise from non-compliance of this instructions manual is a direct contact with electric parts (internal), contact with fire or hot surfaces.</li><li>Pellet stove is equipped with safety components that guarantee lock it automatically in case of failure of any of its components. Safety components are activated without outside interference.</li><li>Necessary for the proper operating of the pellet stove is its proper installation in accordance with the instruction manual requirements.</li><li>Fire door should not be opened during operation of the pellet stove. The burning process is automated and does not require external intervention.</li><li>Do not allow to burn the pellet stove if there are cracks in the glass.</li><li>Under no circumstances should not be allowed penetration of foreign substances in the firebox or hopper.</li><li>Do not use combustible materials to clean soot in the chimney.</li><li>Turn off the pellet stove from the grid-circuit before cleaning or servicing.</li><li>Use a vacuum cleaner to clean the combustion chamber and pellet fuel hopper only when pellet stove is cold.</li><li>Do not use water to clean the internal parts of the pellet stove.</li><li>During operation of the pellet stove must not be allowed to touch a child to its surface, as it is hot. Danger of burns!</li><li>The handle of the pellet stove warms as much as the front panel, so it must be operated with a tool and a heat-resistant glove.</li></ul>	
<ul style="list-style-type: none"><li>During operation of the pellet stove, the flue pipes and the fire door are hot.</li><li>Do not place flammable objects and liquids away from the pellet stove.</li><li><b>NEVER</b> use flammable liquids to burn the pellet stove.</li><li>Do not soak pellet stove and do not touch electrical components with wet hands.</li><li>Do not mount any adapters to flue pipes and chimney.</li><li>Rating label is placed on the back side of the pellet stove.</li><li>Keep the instruction manual, warranty card and purchase invoice in good condition, as will be necessary in any inquiries.</li></ul>	