

PRODUCT FICHE

1. Supplier's name or trademark.	Victoria-05 Ltd. 1B Ivan Momchilov Str. 5100 Gorna Oryahovitsa Republic of Bulgaria Phone: +359 618 60282 E-mail: info@v05.bg http://www.v05.bg
2. Supplier's model identifier.	Pellet stove VITTORIA B*
3. Energy efficiency class.	A++
4. Direct heat output	2.2 kW
5. Indirect heat output.	16.1 kW
6. Energy efficiency index.	130
7. Seasonal space heating energy efficiency.	92.4%
8. Specific precautions during assembling, installing or maintaining:	
• To operate properly and safely, pellet stove should be installed in a room that is fire-resistant and equipped with everything needed (electricity, air exchange, vents).	
• Do not obstruct fresh air to enter the room where pellet stove is installed and through the holes on the pellet stove.	
• The temperature of the room where it is installed the pellet stove must not be lower than 0°C.	
• Use appropriate non-freezing additives for water in the system.	
• Make sure the temperature of the return water is not lower than 45°C.	
• Pellet stove must not run without water in the system and the pressure must not fall below 1 bar. Should the system be lighted without water, pellet stove can be damaged.	
• Pellet stove is designed to heat water through automated burn in the combustion chamber of wood pellets with a diameter of Ø 6 mm.	
• Warranty is voided by unauthorized use of combustible material.	
• The risk that could arise from non-compliance of this instructions manual is a direct contact with electric parts (internal), contact with fire or hot surfaces.	
• Pellet stove is equipped with safety components that guarantee lock it automatically in case of failure of any of its components. Safety components are activated without outside interference.	
• Necessary for the proper operating of the pellet stove is its proper installation in accordance with the following instructions.	
• Fire door should not be opened during operation of the pellet stove. The burning process is automated and does not require external intervention.	
• Do not allow to burn the pellet stove if there are cracks in the glass.	
• Under no circumstances should not be allowed penetration of foreign substances in the firebox or hopper.	
• Do not use combustible materials to clean soot in the chimney.	
• Turn off the pellet stove from the grid-circuit before cleaning or servicing.	
• Use a vacuum cleaner to clean the combustion chamber and pellet fuel hopper only when pellet stove is cold.	
• Do not use water to clean the internal parts of the pellet stove.	
• During operation of the pellet stove must not be allowed to touch a child to its surface, as it is hot. Danger of burns!	
• The handle of the pellet stove warms as much as the front panel, so it must be operated with a heat-resistant glove.	
• During operation of the pellet stove, the flue pipes and the fire door are hot.	
• Do not place flammable objects and liquids away from the pellet stove.	
• NEVER use flammable liquids to burn the pellet stove.	
• Do not soak pellet stove and do not touch electrical components with wet hands.	
• Do not mount any adapters to flue pipes and chimney.	
• Rating label is placed on the back of the pellet stove.	
• Keep this instruction manual, warranty card and purchase invoice in good condition, as will be necessary in any inquiries.	