

PRODUCT FICHE

- | | |
|---|---|
| 1. Supplier's name or trademark. | Victoria-05 Ltd.
1B Ivan Momchilov Str.
5100 Gorna Oryahovitsa
Republic of Bulgaria
Phone: +359 618 60200
E-mail: info@v05.bg
http://www.v05.bg |
| 2. Supplier's model identifier. | Pellet boiler CLASSIC 40C |
| 3. Energy efficiency class. | A+ |
| 4. Rated heat output. | 36 kW |
| 5. Energy efficiency index. | 122 |
| 6. Seasonal space heating energy efficiency. | 82% |
| 7. Specific precautions during assembling, installing or maintaining: | |
- Pellet boiler must not run without water in the system and the pressure must not fall below 1 bar. Should the system be alighted without water, pellet boiler can be damaged.
 - Pellet boiler is designed to heat water through automated burn in the combustion chamber of wood pellets with a diameter of Ø 6 mm.
 - Warranty is voided by unauthorized use of combustible material.
 - The risk that could arise from non-compliance of this instructions manual is a direct contact with electric parts (internal), contact with fire or hot surfaces.
 - Pellet boiler is equipped with safety components that guarantee lock it automatically in case of failure of any of its components. Safety components are activated without outside interference.
 - Necessary for the proper operating of the pellet boiler is its proper installation in accordance with the following instructions.
 - Fire door should not be opened during operation of the pellet boiler. The burning process is automated and does not require external intervention.
 - Do not allow to burn the pellet boiler if there are cracks in the glass.
 - Under no circumstances should not be allowed penetration of foreign substances in the firebox or hopper.
 - Do not use combustible materials to clean soot in the chimney.
 - Turn off the pellet boiler from the grid-circuit before cleaning or servicing.
 - Use a vacuum cleaner to clean the combustion chamber and pellet fuel hopper only when pellet boiler is cold.
 - Do not use water to clean the internal parts of the pellet boiler.
 - During operation of the pellet boiler must not be allowed to touch a child to its surface as it is hot. Danger of burns!
 - The handle of the pellet boiler warms as much as the front panel, so it must be operated with a heat-resistant glove.
 - During operation of the pellet boiler flue pipes and fire door are hot.
 - Do not place flammable objects and liquids away from the pellet boiler.
 - Never use flammable liquids to burn the pellet boiler.
 - Do not obstruct fresh air to enter the room where pellet boiler is installed and through the holes on the pellet boiler.
 - Do not soak pellet boiler and do not touch electrical components with wet hands.
 - Do not mount any adapters to flue pipes and chimney.
 - To operate properly and safely, pellet boiler should be installed in a room that is fire-resistant and equipped with everything needed (electricity, air exchange, vents).
 - The temperature of the room where it is installed the pellet boiler must not be lower than 0°C.
 - Use appropriate non-freezing additives for water in the system.
 - Make sure the temperature of the return water is not lower than 45°C.
 - Rating label is placed on the back of the pellet boiler.
 - Keep this instruction manual, warranty card and purchase invoice in good condition, as will be necessary in any inquiries.
 - In extinction, doth not burn a pellet boiler again before cleaning the combustion chamber!
 - Removed pellets from the combustion chamber should not be placed back in the pellet fuel hopper!