



**PRODUCT FICHE**

Victoria-05 Ltd.

1B Ivan Momchilov Str., 5100 Gorna Oryahovitsa, Republic of Bulgaria

Phone: +359 618 60200, E-mail: [info@v05.bg](mailto:info@v05.bg) , <http://www.v05.bg>

Supplier's model identifier fireplace stove	Energy efficiency class	Direct heat output (kW)	Indirect heat output (kW)	Energy efficiency index (EEI)	Efficiency (%)
		Wood	Wood		Wood
<b>Unica</b>	<b>A</b>	<b>8,3</b>		<b>99</b>	<b>75,1</b>
Omega	A	8,3		99	75,1
Rubin Lux	A	13,0		99	75,1
<b>Opal-w</b>	<b>A</b>	<b>5,2</b>		<b>106</b>	<b>80,0</b>
Opal Lux-w	A	5,2		106	80,0
Opal L-w	A	5,2		106	80,0
Orion	A	7,0		106	80,0
Rhyton	A	9,0		106	80,0
Orion Vision	A	7,0		106	80,0
<b>Marinela K</b>	<b>A</b>	<b>7,2</b>		<b>100</b>	<b>75,8</b>
Marinela	A	7,2		100	75,8
Marinela S	A	7,2		100	75,8
Marinela PS-t	A	7,2		100	75,8
<b>Marinela PKBO-t</b>	<b>A</b>	<b>3,3</b>	<b>5,1</b>	<b>105</b>	<b>79,6</b>
Marinela PBO-t	A	3,3	5,1	105	79,6
Marinela PSBO-t	A	3,3	5,1	105	79,6
Marinela B*	A	3,3	5,1	105	79,6
<b>Titan A</b>	<b>A</b>	<b>13,5</b>		<b>101</b>	<b>76,9</b>
Titan S	A	13,5		101	76,9
Titan	A	13,5		101	76,9
Grande	A	14,0		101	76,9
Grande A	A	14,0		101	76,9
Grande Lux	A	14,0		101	76,9
Grande Lux A	A	14,0		101	76,9
Pearl	A	14,0		101	76,9
Pearl A	A	14,0		101	76,9
Pearl S	A	14,0		101	76,9
Rein K	A	14,0		101	76,9
Diplomat	A	14,0		101	76,9
Sonata	A	16,0		101	76,9
Triumph	A	15,0		101	76,9
Atlant CM	A	15,0		101	76,9
Atlant C	A	15,0		101	76,9
Comfort K	A	11,0		101	76,9
Comfort AK	A	11,0		101	76,9
Ray Max	A	13,0		101	76,9
Ray Max G	A	13,0		101	76,9
Rubin	A	13,0		101	76,9
Onyx	C	13,4		77	60,0
Opus	A	14,0		101	76,9
Opus S	A	14,0		101	76,9
Taro	A	10,0		101	76,9
Taro 2	A	10,0		101	76,9
Panama	A	9,0		101	76,9
Panama A	A	9,0		101	76,9



Supplier's model identifier fireplace stove	Energy efficiency class	Direct heat output (kW)	Indirect heat output (kW)	Energy efficiency index (EEI)	Efficiency (%)
		Wood	Wood		Wood
Panama 2	A	9,0		101	76,9
Panama 2A	A	9,0		101	76,9
Nero Lux	A	11,0		101	76,9
Brita	A	11,0		101	76,9
Delta	A	16,0		101	76,9
<b>Diplomat BO-v</b>	<b>A</b>	<b>6,8</b>	<b>7,6</b>	<b>105</b>	<b>79,5</b>
Diplomat B*	A	6,8	7,6	105	79,5
Sonata B*	A	8,5	7,5	105	79,5
Sonata BO	A	8,5	7,5	105	79,5
Ray Max B*	A	5,5	7,5	105	79,5
Rubin B*	A	5,5	7,5	105	79,5
Rubin BO	A	5,5	7,5	105	79,5
Nero Lux B*	A	6,0	5,0	105	79,5
Nero Lux BO	A	6,0	5,0	105	79,5
Grande B*	A	6,6	7,6	105	79,5
Grande BO-tv	A	6,6	7,6	105	79,5
Grande AB*	A	6,6	7,6	105	79,5
Grande ABO-tv	A	6,6	7,6	105	79,5
Grande Lux BO-tv	A	6,6	7,6	105	79,5
Grande Lux B*	A	6,6	7,6	105	79,5
Grande Lux AB*	A	6,6	7,6	105	79,5
Grande Lux ABO-tv	A	6,6	7,6	105	79,5
Titan SBO-tw	A	6,6	7,6	105	79,5
Titan ASBO-tw	A	6,6	7,6	105	79,5
Pearl AB*	A	6,6	7,6	105	79,5
Pearl SB*	A	6,6	7,6	105	79,5
Rein B*	A	6,6	7,6	105	79,5
Rein BO	A	6,6	7,6	105	79,5
Rein KB*	A	6,6	7,6	105	79,5
Triumph B*	A	7,5	7,5	105	79,5
Comfort KB*	A	4,0	7,0	105	79,5
Deluxe B*	A	5,1	7,1	105	79,5
Elegance B*	A	4,2	5,1	105	79,5
Triumph FB*21	A	7,5	6,6	105	79,5
<b>Torino</b>	<b>A+</b>	<b>7,2</b>		<b>110</b>	<b>83,1</b>
Tali	A+	7,2		110	83,1
Triton	A+	7,2		110	83,1
Vision	A+	7,2		110	83,1
Vision S	A+	7,2		110	83,1
Maestro K	A+	7,6		110	83,1
Verona	A+	9,2		110	83,1
Verona L	A+	9,2		110	83,1
Verona K	A+	9,2		110	83,1
Novara K	A+	9,2		110	83,1
Novara S	A+	9,2		110	83,1
Spectra K	A+	9,2		110	83,1
Venice	A+	9,2		110	83,1
Elegant	A+	11,0		110	83,1
Elegance	A+	9,2		110	83,1



Supplier's model identifier fireplace stove	Energy efficiency class	Direct heat output (kW)	Indirect heat output (kW)	Energy efficiency index (EEI)	Efficiency (%)
		Wood	Wood		Wood
Lotus	A+	10,0		110	83,1
Ray	A+	9,0		110	83,1
Maestro L	A+	9,0		110	83,1
Maestro	A+	9,0		110	83,1
Deluxe L	A+	9,0		110	83,1
Deluxe LG	A+	9,0		110	83,1
Deluxe	A+	11,9		110	83,1
Deluxe A	A+	11,9		110	83,1
Deluxe E	A+	11,9		110	83,1
Vanessa Lux	A+	12,0		110	83,1
Mega Max	A+	10,0		110	83,1
Galant	A+	10,0		110	83,1
Solar	A+	12,0		110	83,1
Ruby	A+	8,0		110	83,1
Ruby 2	A+	8,0		110	83,1
Toledo	A+	7,0		110	83,1
Regina	A+	9,0		110	83,1
<b>Verona KBO</b>	<b>A</b>	<b>4,2</b>	<b>5,1</b>	<b>96</b>	<b>73,4</b>
Verona KB*	A	4,2	5,1	96	73,4
Verona BO	A	4,2	5,1	96	73,4
Venice B*	A	4,2	5,1	96	73,4
Spectra KB*	A	4,2	5,1	96	73,4
Spectra KBO	A	4,2	5,1	96	73,4
Elegant B*	A	5,0	7,0	96	73,4
Panama AB*	A	4,0	5,0	96	73,4
Panama 2AB*	A	4,0	5,0	96	73,4
<b>Passat</b>	<b>A</b>	<b>5,4</b>		<b>106</b>	<b>80,0</b>
Padua	A	5,4		106	80,0
Bora L	A	5,0		106	80,0
Bora Lux L	A	5,0		106	80,0
Deluxe SI	A	5,0		106	80,0
Deluxe SLH	A	5,0		106	80,0
Deluxe Sm	A	7,0		106	80,0
Nero	A	6,0		106	80,0
iStove	A+	5,0		112	84,1
Bora	A	8,3		106	80,0
Bora Lux	A	8,3		106	80,0
Parma	A	5,0		106	80,0
Parma L	A	5,0		106	80,0
Parma SL	A	5,0		106	80,0
Evo/Neo	A	5,0		106	80,0
<b>Taro F</b>	<b>A</b>	<b>9,5</b>		<b>102</b>	<b>76,9</b>
Taro 2F	A	9,5		102	76,9
Comfort F	A	10,0		102	76,9
Comfort KF	A	10,0		102	76,9
Grande F	A	12,0		102	76,9
Triumph F	A	15,0		102	76,9
Deluxe F	A	11,3		102	76,9
Deluxe FR	A	11,3		102	76,9



Supplier's model identifier fireplace stove	Energy efficiency class	Direct heat output (kW)	Indirect heat output (kW)	Energy efficiency index (EEI)	Efficiency (%)
		Wood	Wood		Wood
<b>Pandora C</b>	<b>A</b>	<b>12,4</b>		<b>102</b>	<b>76,9</b>
Pandora CA	A	12,4		102	76,9
Bora C	A	9,5		102	76,9
<b>Atlant CB*</b>	<b>A</b>	<b>7,7</b>	<b>7,5</b>	<b>91</b>	<b>69,6</b>
Atlant CMB*	A	7,7	7,5	91	69,6
<b>Modena Vision</b>	<b>A+</b>	<b>9,8</b>		<b>110</b>	<b>82,1</b>
Modena	A+	9,8		110	82,1
Modena L	A+	9,8		110	82,1
<b>Capri</b>	<b>A+</b>	<b>7,6</b>		<b>108</b>	<b>80,5</b>

Specific precautions during assembling, installing or maintaining:

- The appliance should be installed in rooms with sufficient airflow, which is required for the combustion.
- Not every appliance could be connected to any chimney. Before assembling of the appliance, check if the static pressure and the chimney dimensions conforms to the needed parameters for the appliance. If the appliance does not conform to the chimney, it will lead to a lower burning rate and polluting the glass with soot.
- The chimney should be high enough (at least five meters). Only one more appliance can be connected to the same chimney. The flue draught should be higher than 10 Pa. If the chimney is too high (the draught exceeding 35 Pa) then it is necessary to mount a supplementary valve to reduce the draught.
- The chimney should be very well insulated, with inside diameter at least  $\varnothing$  150 mm or with a section area at least 200 cm<sup>2</sup>.
- The appliance should not be connected to a chimney when there is a solid fuel boiler connected to it.
- The floor, where the appliance is placed, should be flat and horizontal, made of **non-combustible materials**.
- If there are any combustible materials or constructions, the appliance should be away from them at specified distances on the rating label or there must be put an additional incombustible screen.
- After the installation of the appliance, it has to be attached to the chimney through flue pipes. The connections between the flue pipes and the socket should be tight. The flue pipe should not enter into the chimney.
- Vertical connection of flue pipes with the chimney through floor structures is not allowed.
- The presence of easily inflammable and explosive substances in the heated room is not allowed.
- The ash disposal and the cleaning of the appliance should be done only at safe places and when the appliance has cooled down.
- It is prohibited to put combustible materials and objects on the appliance or in immediate proximity of it.
- The appliance is intended to local heating of chambers with normal fire hazard.
- **The appliance is not designed to be used by children and persons with limited physical, sensuous and mental abilities, or by people with not enough experience and knowledge, except in cases when they are watched and instructed how to work with this type of heater, by someone who is responsible for their own safety.**
- The door of the firebox should always be firmly closed even when the appliance is not working.
- Using easily inflammable liquids is not allowed at ignition.
- The design, connection and servicing of the heating installation should be obligatory made by an authorized organization.
- The flue pipes and the interior of the appliance should be cleaned at least once per year.
- The painted surfaces should be cleaned with a dry and soft brush, or with dry and soft towel.
- The glass should be cleaned after cooling down by washing with a soap solution and should be dried afterwards.
- The correct maintenance and cleaning of the appliance guarantee its reliable work and keeping its good appearance.
- The rating label is put on the back bottom side of the appliance.
- Keep the instruction manual, warranty card and original invoice in good order, as you will need in case of any inquiries.